

ROLL UP DOORS DIRECT INSTALLATION INSTRUCTIONS Pantheon Mini Operator



The Pantheon mini operator does not typically require the provision of any additional site requirements other than those which are required for the normal installation of the Roll Up Doors Direct mini rolling door.

IMPORTANT INSTALLATION SAFETY

THE FOLLOWING SAFETY INSTRUCTIONS RELATE TO THE
INSTALLATION OF THE PANTHEON MINI ROLLING DOOR OPERATOR.

WARNING !! TO REDUCE THE RISK OF DEATH OR SEVERE INJURY, ALL OF THE FOLLOWING INSTRUCTIONS MUST BE READ, ACKNOWLEDGED AND ADHERED TO.

- **DO NOT** permit children or unauthorized persons in or about the work area during installation or testing of the rolling door and operator.
- **DO NOT** attempt to install the rolling door unless you have read , understood and acknowledged the installation instructions provided for the mini rolling door.
- **DO NOT** attempt to install or place in service the Pantheon operator or any accessories unless you have read, understood and acknowledged the instructions provided.
- **ENSURE** that all electrical connections for main power supply are made in accordance with local and NEC wiring codes.
- **ENSURE** that the mini rolling door is installed with correct spring tension and side clearances—the rolling door must operate in the manual condition without binding or sticking in the guides.
- **INSTALL** the logic controller in a suitable location—at a minimum of five (5) feet from the ground and maximum of three (3) feet from the edge of the opening and in clear sight of the surrounding areas.
- **OBSERVE** local and national safety codes, including but not limited to UL 325, when connecting external accessories and any requirement for the installation of an external entrapment device.
- **REMOVE** or render inoperable any manually operated locks that may be installed on the mini rolling door.
- **REMOVE** the factory fitted “test plug” unless required for the purposes of supervised operation and testing during the installation process.
- **ALWAYS** complete the commissioning and handover check list and ensure that the client, site manager or authorized representative is fully instructed in the safe operation of the mini rolling door and operator.
- **REFER** any technical problems or enquiries relating to the rolling door or the operator to the manufacturer (Janus International).

IMPORTANT OPERATION SAFETY

THE FOLLOWING SAFETY INSTRUCTIONS RELATE TO THE OPERATION OF THE PANTHEON MINI ROLLING DOOR OPERATOR.


WARNING !! TO REDUCE THE RISK OF DEATH OR SEVERE INJURY, ALL OF THE FOLLOWING INSTRUCTIONS MUST BE READ, ACKNOWLEDGED AND ADHERED TO.

- **DO NOT** permit children to operate the control panel, wall switch or any remote control device connected to or designed to operate the rolling door.
- **DO NOT** attempt to operate the rolling door unless you have a clear and unobstructed view of the door and the surrounding area.
- **DO NOT** operate the rolling door if there are children or persons in the vicinity of the opening—wait until the area is clear before operating.
- **DO NOT** stand or walk under a moving rolling door.
- **TEST** any safety features of the operator on a regular monthly basis and in the event that a fault is determined, discontinue use of the door and operator until such time as the problem is rectified by a qualified technician.
- **LOCAL AND STATE** safety regulations may require the connection of an external entrapment protection device when certain optional operational features of the operator are selected. These include the use of timer devices, auto close feature, momentary contact to close and the use of remote control transmitters.
- **PRIOR TO OPERATING** the door—ensure that you are familiar with the full operational characteristics of the rolling door and operator and understand the safety requirements.
- **DO NOT** attempt any repairs, modifications or adjustments to the door or operator—all such issues should be attended to by a trained door systems technician using proper tools and instructions.
- **IF POSSIBLE** only activate the manual release lever when the rolling door is in the closed position because weak or broken springs could allow the door to fall rapidly. In all cases, use caution when using the manual release.
- **IF ANY DOUBT** exists with any feature or function of the door or operator, consult the manufacturer, agent, distributor, or authorized installation technician.
- **KEEP** these instructions in a safe and suitable location for reference and ensure that all personnel are advised accordingly.


STEP 1

Connecting the manual release cable to the drive unit (to be done before door is installed).


Remove the knurled split nut.

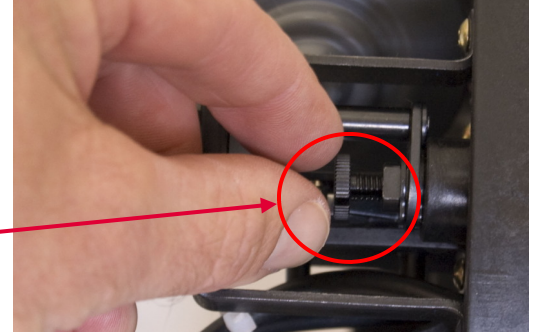

Pull ring on spring loaded pin and twist to disengage auto (electric) mode.

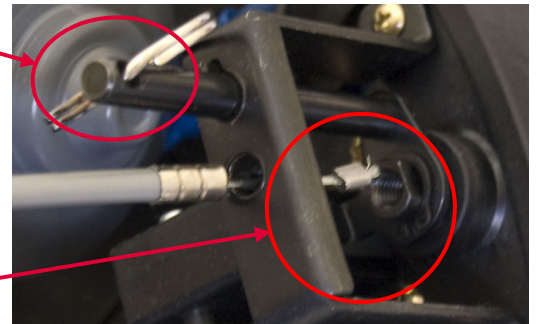


Uncoil the manual release cable and insert the free end of the cable into the threaded recess where the knurled split nut was removed.

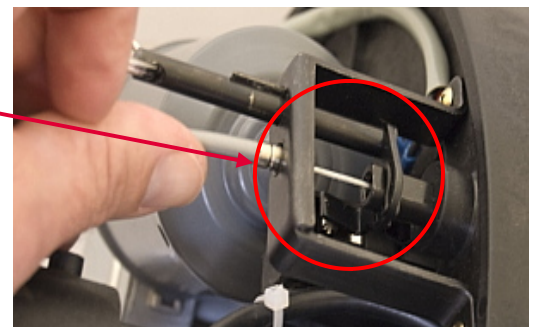

Reinstall knurled split nut and tighten.

Carefully coil release cable and motor electric cables together and secure to each other in order to prevent uncoiling or damage during installation of the door.

Remove RH bracket from end of door.

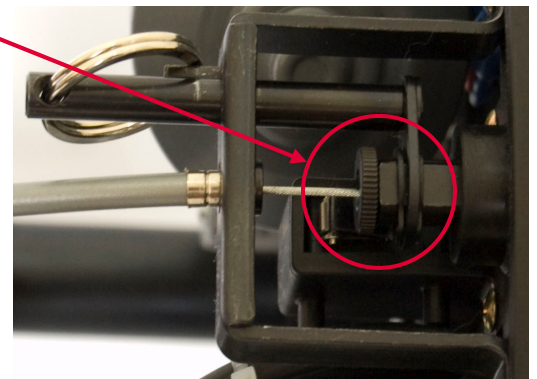

STEP 2

Installing drive unit and door



Place the drive unit inside the door drum assembly and verify the three studs on the back of the drive unit are fully engaged in the three holes in the steel drum wheel.

Note: Release pin must be in manual operation position.

Locate 2 3/8" long spacer tube. Slide RH bracket over axle. Place 3" long bolt with lock washer thru hole in bracket and spacer tube and thread into hole in drive unit. Tighten bolt securely. Press new gold colored retaining ring over axle and position next to bracket.

Install door per series 650/1000 installation guide.

Spring tension and curtain clearances should be maintained as per normal installation.

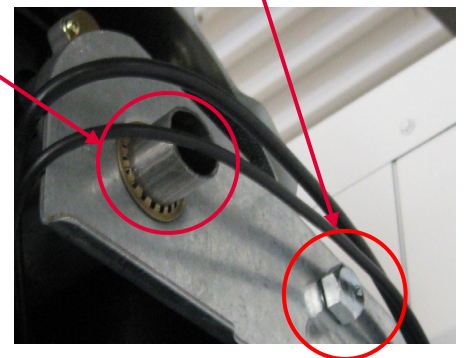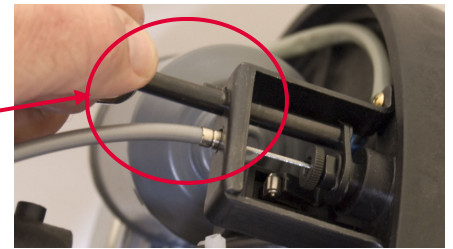

CAUTION

Take care to ensure that the cables from the drive unit are not damaged or permitted to bind on any part of the structure or the door during the installation.

STEP 3

Installing the logic controller

With the door fully installed, carefully uncoil the cables from the drive unit and arrange so they are protected from damage.

Locate a suitable place for the installation of the logic controller, ensuring adequate free cable length.

The logic controller shall be installed on the same side of the opening as the drive unit and at a location that has a clear view of the door operating area.

Remove the controller's cover by removing the four captive screws and mount controller to wall.



Connect the main power in accordance with all local and NEC wiring codes.

STEP 3 (continued)



Installing the logic controller

Once the logic controller enclosure is attached to the structure, locate the **drive unit** (larger) cable and the **electronic limit** (smaller) cable.

Insert the electronic limit cable plug through the small hole provided at the bottom of the enclosure and plug into the receptacle marked "LIMIT" at bottom of the board. Use care to ensure plug is installed properly.

Locate cable strain relief bushing. Loosen large bottom gland nut and remove flat nut. Slide bushing over four wire drive unit cable, being careful to place gland nut end first over wire. Insert wire thru hole at bottom of enclosure. Put strain relief bushing in large enclosure hole. Place flat nut over wire and tighten to bushing. Remove green plug (MANUAL OP. MOTOR) from bottom right of board. Attach four wires to plug, being certain to follow color coding on the board. Insert plug with wires to board receptacle. Tighten gland nut on outside of strain relief.

As per factory issue, the logic controller is designed to operate with Momentary Contact to OPEN and Constant Contact to CLOSE.

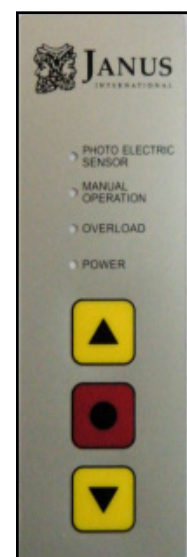
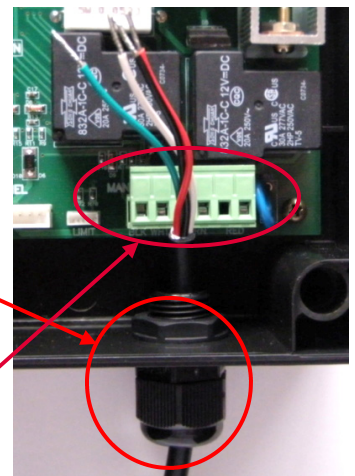


STEP 4

Verifying the handing of the operator

The “mini” logic controller is designed to operate only on RH (right hand) drive installations, as viewed from inside (coil side) looking out. A jumper is NOT required on the DIRECTION terminal.

All mini logic controllers shall have the jumper positioned as shown on the JSS (MINI) terminal.

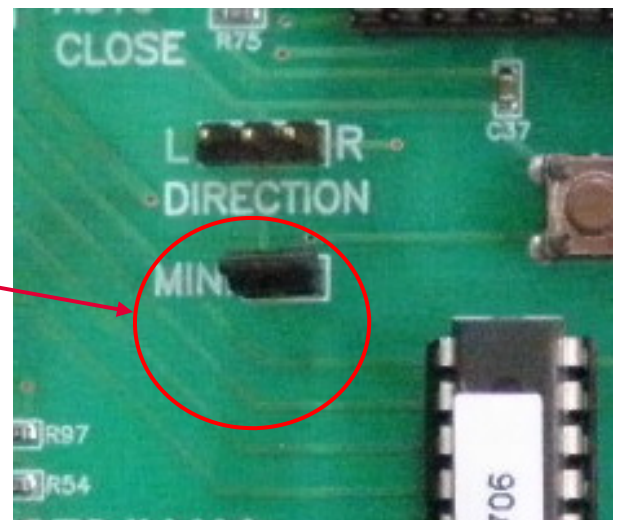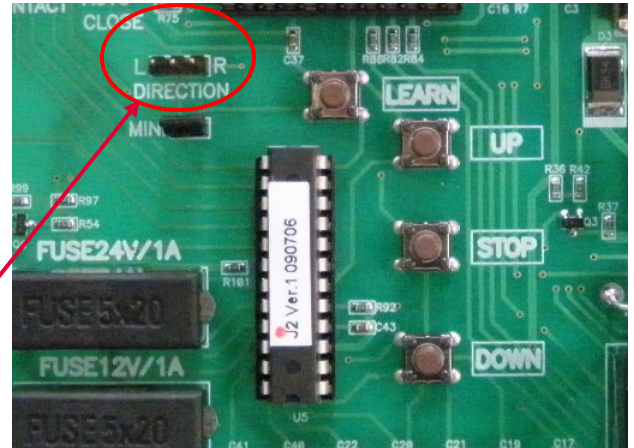

CAUTION

Always switch line power OFF when handing the operator.

STEP 5

Setting the electronic door limits

Reengage the drive unit from manual to auto (electric) operation. Rotate door barrel assembly slowly until pin fully engages. Connect input power line and turn unit switch to on. Unit will beep when switched on.

1. Press and hold **LEARN** button until three **BEEP** sounds are heard.

The logic controller will now learn the **OPEN** position **FIRST**.

2. Press and hold the **UP** button until the door moves. Release button at the required **OPEN** position.

Small adjustments may be made by momentary pressing of the **UP** or **DOWN** button to move the door to the required position.

DO NOT ALLOW BOTTOM BAR TO CONTACT THE HEAD STOPS.

3. When the **OPEN** position is reached, press the **LEARN** button once. Two **BEEP** sounds will confirm the setting.

The logic controller is now ready to learn the **CLOSED** position.

4. Press and hold the **DOWN** button until the door moves. Release button at the required **CLOSED** position.


Small adjustments may be made by momentary pressing of the **UP** or **DOWN** button to move the door to the required position. **DO NOT ALLOW DOOR TO OVER-TRAVEL ONCE CONTACT HAS BEEN MADE BY THE BOTTOM BAR TO THE FLOOR.**

5. When the **CLOSED** position is reached, press the **LEARN** button once. Two **BEEP** sounds will confirm the **CLOSED** setting. After settings completion, the operator will perform an automatic check of both open and closed settings.


WARNING

Door will immediately travel up and then down on its own. Keep away from moving door.


1 Learn

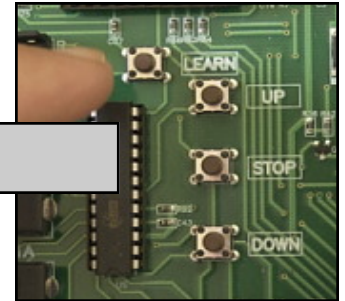


2 Open Position

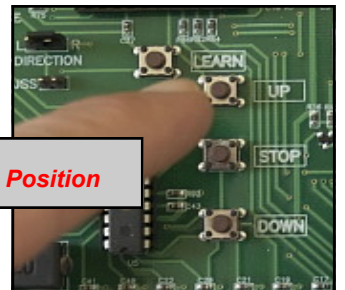


3 Confirm & Learn

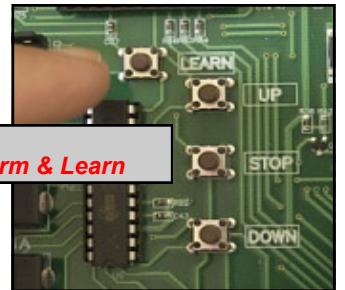

4 Closed Position

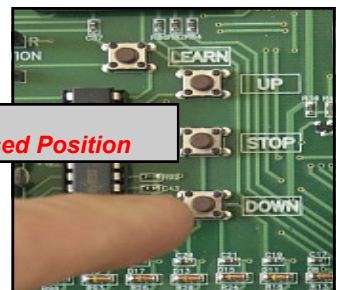

5 Confirm Settings

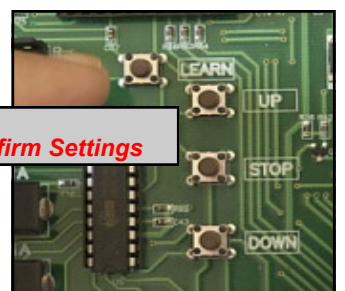

STEP 6

Setting the DOOR SIZE jumper


The logic controller is designed to electronically detect and monitor the normal operation of the door.

This assures that the operator will automatically stop and reverse its closing motion or alternately stall its opening motion if an obstruction is detected.

To set the DOOR SIZE adjustment, begin with the jumper at **S** and check that the door will operate down without reversing and up without stalling.

If required, move the jumper through the ranges **M**, **L**, & **XL** until satisfactory operation is achieved.

Final adjustment of the sensitivity setting is performed by following the instructions as set out under the heading, "ADJUSTING the SENSITIVITY", step 7.

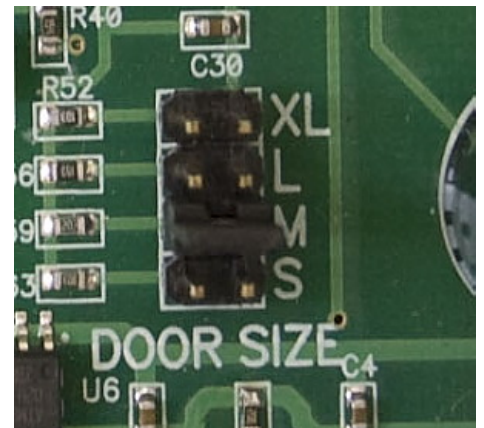

WARNING

It is essential that this reversal feature is not recognized as an external entrapment protection device, as may be required to satisfy national safety codes including, but not limited to, UL 325.

STEP 7

Adjusting the sensitivity



This feature allows the logic controller to be adjusted for small operational imbalances, in conjunction with the door size jumper setting, and permit the door to operate as required in both directions.

Adjustments **shall be made** once the door size setting is complete. Refer to instructions under the heading, "Setting the DOOR SIZE jumper", step 6.

Fine tuning is performed by **careful** rotation of the corresponding Open or Close Sensitivity Adjust screw, as required.

To **Increase +** the sensitivity of the operator, rotate the required (Open or Close) setting **Counterclockwise**.

To **Decrease —** the sensitivity of the operator, rotate the required (Open or Close) setting **Clockwise**.

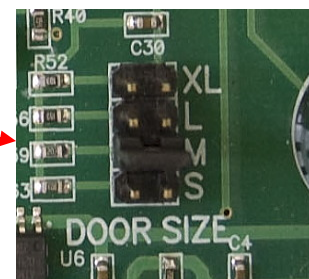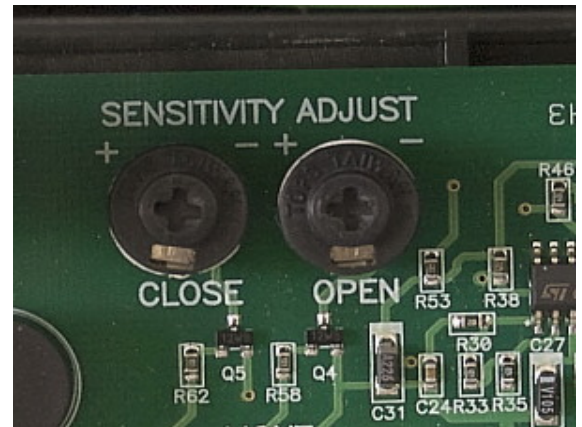

STEP 8

Installing the manual release control

Route the manual release cable, verifying that smooth lever operation is maintained. Avoid tight bends so the inner cable will move freely.


Locate a suitable position for the lever control.

Attach the lever control to the wall with the lever moved toward the right to actuate the Auto (electric) operation.

Make sure the drive unit is fully engaged by gently moving the curtain of the door in either direction (*up or down*) until the pin is locked into position.

Check to be sure the lever is able to withdraw the manual release pin and reengage it as required.

Adjust the internal lever tension screw, if required, to hold the manual release pin in the manual condition. Install control cover.

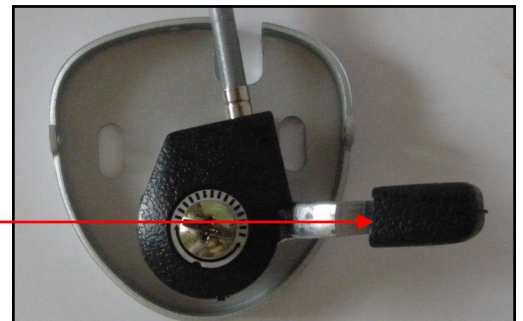

STEP 9

Commissioning and handover of the door and operator

Once all the steps in the installation process have been successfully followed and any external accessories have been correctly connected, the door, operator, and any external accessories should be fully tested prior to handover and demonstration to the customer or authorized representative.

The handover process should include the exchange of any owners manuals, instruction manuals, warranty cards or documents, remote control transmitters together with a complete demonstration of the fully functioning door, operator and any external accessories.

Contact:
Roll Up Doors Direct

1 877 RL DOORS
1 877 753 6677
info@rollupdoorsdirect.com
www.rollupdoorsdirect.com

Checklist

- With door in manual mode, check door operation
- Check activation of manual release lever
- Check auto reverse operation
- Check auto close - if selected
- Check timer device - if connected
- Check photo electric sensor function - if connected
- Check edge sensor function - if connected
- Check wall switch - if connected
- Check remote control transmitter operation - if connected
- Check that all manual locks are inoperable
- Remove "test plug" at photo electric sensor terminal - if fitted
- Demonstrate all functions to client and hand over any accessory items or documentation